



Shanghai Hefil Purifying  
Equipment Manufacturing Co.,Ltd

Shanghai HEFIL Purifying Equipment Manufacturing Co., Ltd.

[www.hefilter.com](http://www.hefilter.com)

# HLB-Clean Laminar Booth

## Introduction:

Can be lifted over the process point that requiring high cleanliness, to meet the requirements of local high cleanliness;

Outer casing can be made of sandwich panel, cold-rolled steel or stainless steel sheet;

Can be used alone, also be composed of multiple parallel into a banding clean laminar flow;


Less investment, fast effect, easy installation, low operating costs; we supply [Ventilation filter](#).

Cleanliness: FS209E Class 100 / ISO Class 5;

Mean Stream Velocity: 0.35~0.55m/s;

Noise: ≤64dB(A).

See more at: <http://www.hefilter.com/Clean-room-equipment/>

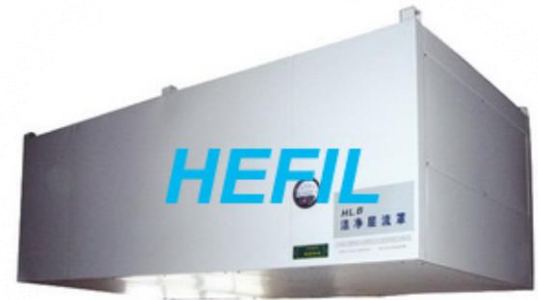

# HBX-Pass Box



## **Introduction:**

The work surface of internal cabinet is made of stainless steel, flat and smooth;

Outer casing is made of high-quality cold-rolled steel or stainless steel sheet;

Mechanical or electronic interlocking, to prevent both sides of the door opened at the same time. We supply [cardboard filters](#).

**Application:** Mainly used to deliver goods between clean areas or between clean area and non-clean area, to minimize the contamination of clean room.

See more at: <http://www.hefilter.com/Clean-room-equipment/>

# HCB-Clean Bench

## Features:

Providing for working environment of Class 100 cleanliness;

Two type of device: cross laminar flow & down laminar flow;

Adopting ultra-fine fiber glass paper with low resistance and large air volume, the built-in mini pleat filter occupies small space;

To ensure that the air velocity of working area has always been the ideal state, the fan delivery can be regulated steplessly by electronic touch-control panel;

Fitted up with stainless steel working surface and Plexiglas guard board. The ultraviolet light can be equipped with electric remote control interface; we supply [Combination filters](#).

**Application:** Clean bench is used for maintaining limited workspace as clean environment using gem-free and dust-free device.

See more at: <http://www.hefilter.com/Clean-room-equipment/>



# HSP-Traveling Air Self-purifier

## Features:

Providing for Class 100 cleanliness level of air outlet;  
Outer casing is made of high-quality cold-rolled steel plate treated by electrostatic plastic spray;  
No installation, easy to move;  
To ensure that the air velocity of outlet has always been the ideal state, the fan delivery can be regulated steplessly by electronic touch-control panel;  
The bottom of outer casing is equipped with universal wheels fitted with brake. The [v bank filters](#) is worthy to have.

**Application:** Providing for small-scale local clean working environment, the purifier is no need to install and easy to move. In particular, apply to the work process needs of the constantly changing location.

See more at: <http://www.hefilter.com/Clean-room-equipment/>



# HBO-Clean Booth



## Introduction:

Clean Booth is also called non-dust working room; it is the fastest and most convenient simple clean room. It has multi-kind of space collocation, can also design as per customer's request with the features of operation simple and convenient, and short construction time, good mobility, and can be set additionally in the local area of general class clean room where required the high cleanliness requirements to decrease the cost. The [Absolute HEPA filter](#) is best!

The main structure is connected with the stainless steel square pipe and aluminum alloy square pipe, provided the air flow by fan filter group FFU, anti-static curtain around, covered the seal blind in the top to reach a sealed zone, the inside cleanliness class will be 10-100000 class; it is very suitable to use in the high cleanliness requirements of the workshop zone, e.g. assembly line work zone, high precision products assembling zone.

See more at: <http://www.hefilter.com/Clean-room-equipment/>



Once you have any questions, you can  
contact us:

Tel: +86 21 67632698

Mail: [echo@hefil.com](mailto:echo@hefil.com)